

GROHE KITCHEN

Pure Freude
an Wasser



NEW

GROHE
EASYTOUCH

LOVE AT
FIRST TOUCH



GROHE | MASTERS OF TECHNOLOGY

FOR FURTHER INFORMATION PLEASE VISIT OUR WEBSITE WWW.GROHE.COM/US.
GROHE America, Inc. | 160 Fifth Ave, New York, NY 10010 | ©05/2016 – Copyright by GROHE

PART OF LIXIL

GROHE EASYTOUCH





Simple activation/deactivation of the water flow by touch.



Manual control with the lever.

Ideal for busy kitchens where there's always something going on, GROHE EasyTouch is hygienic and convenient, and comes without any compromise on style. With GROHE'S innovative EasyTouch technology you can spend less time cleaning and more time cooking, baking, kneading, finger-painting...living.

LOVE AT FIRST TOUCH

Kitchens are hands-on places, where multi-tasking is a must. Why not make life easier for yourself with a GROHE touch-activated faucet? We've developed an innovative solution that lets you control the flow of water without using your hands, making your kitchen more hygienic, convenient and instinctive to use. GROHE EasyTouch faucets can be activated with a simple touch of the wrist or elbow. Leave your hands free and keep your faucet sparkling clean. Change the way you control your kitchen with just a single touch.



GROHE EASYTOUCH



LOVE AT FIRST TOUCH



The kitchen is the heart of your life at home – and let's face it, sometimes life gets messy. With GROHE's innovative EasyTouch faucets sticky fingers won't slow you down and cross-contamination is a thing of the past. Hidden GROHE technology lets you start and stop the flow of water with a single tap of your arm, wrist or the back of your hand, anywhere on the spout. No more greasy fingerprints or struggling to turn a lever with your elbow.



GROHE EASYTOUCH PRODUCT FEATURES



GROHE StarLight®
Radiant long-life shine resistant
to soil and tarnishing.



SmoothTurn
GROHE's EasyTouch technology automatically
detects whether you are touching the faucet
in order to start the water flow or whether
you are holding the spout for less than 5 sec-
onds to swivel it into place.





EasyTouch

Just touch the faucet at any point with your wrist, elbow or just your fingertip to turn the faucet On and Off. Adjust to desired temperature with the new mixing valve.



Pull-Out Mousseur Spray

Increases operating radius of the faucet and offers different sprays.



GROHE SilkMove®

Activate/Deactivate the faucet using the mechanical lever.

GROHE LADYLUX³ CAFÉ TOUCH

Put the sweeping, sensual power of water at the centre of your kitchen with the Ladylux³ Café Touch. Ladylux³ Café's distinctive fluted swivel spout and beautifully tactile lever combine ergonomic design with visual flair. And with the addition of GROHE's EasyTouch technology, you can also control the water flow with just one touch. Choose your EasyTouch function in the standard-version with an integrated mixing unit or upgrade with an under-sink Grohtherm[®] Micro thermostat for perfectly controlled warm water and no danger of scalding.





30 205 001 / 30 205 DC1
Electronic Sink Mixer
with pull-out dual spray



34 507 000
Grotherm® Micro



40 553 000 / 40 553 DC0
Ladylux soap dispenser
for liquid soaps
15 oz. capacity

Colour options:

● 000/001 | StarLight® Chrome | ● DC0/DC1 | SuperSteel



GROHE
SilkMove®



GROHE
StarLight®



Easy
Touch



Pull-Out
Dual Spray



Speed
Clean



Comfort
Height



Forward
Rotating Lever



GROHE MINTA TOUCH

Modern and minimal, the sensual curves and arcs of GROHE's Minta range will never go out of fashion, and sit perfectly in any contemporary kitchen. Now you can add the ultimate in cleanliness and convenience with the EasyTouch model. Letting you turn the water flow on and off with a touch of your arm, Minta Touch puts you in control. Choose your EasyTouch function in the standard-version with an integrated mixing unit or upgrade with an under-sink Grohtherm Micro thermostat for perfectly controlled warm water and no danger of scalding.





Minta Touch has been approved and recommended for use by disabled people and the elderly. It has been tested and rated "good" by the Institute for Gerontotechnik for Barrier Free Building, due to its one-touch operating technology and ergonomic design.



31 359 001 / 31 359 DC1
Electronic Sink Mixer
C-spout
with pull-out dual spray



30 218 001 / 30 218 DC1
Electronic Sink Mixer
L-spout
with pull-out spray



34 507 000
Grotherm® Micro



40 535 000 / 40 535 DC0
Cosmopolitan soap dispenser
for liquid soaps
15 oz. capacity

Colour options:

● 000/001 | StarLight® Chrome | ● DC0/DC1 | SuperSteel



GROHE
SilkMove®



GROHE
StarLight®



Easy
Touch



Pull-Out
MousseurSpray



Pull-Out
Mousseur



Speed
Clean



Comfort
Height



Forward
Rotating Lever



GROHE EASYTOUCH INSTALLATION

The Installation of the EasyTouch faucets is surprisingly easy. Just follow the main installation steps below and your faucet will be ready to use in no time. To see the complete installation, scan the QR code on the right-hand side to watch the installation video online.



To watch the full installation video on YouTube scan the QR code with your smartphone or tablet.



1. Pass the three flexible hoses through the base plates and the o-ring, hold it in place under the mixer. Then guide the hoses and mixer through the tap hole. Assemble the mixer under the sink with the fixing set.



2. Attach the flexible hoses (cold & warm) to both t-connections and connect the mixing valve with the t-connector on the cold water angle valve via the single flexible hose.



3. Secure the controller and the solenoid valve housing to the kitchen cabinet (max. distance to mixer of 300mm) and connect it with the mixing valve.



4. First fix the yellow balancing cable under the sink using the supplied tape, then insert the battery into the solenoid valve.



5. Preset the desired temperature for the EasyTouch function at the mixing valve. Test and enjoy the EasyTouch technology!

GROHE FOOT CONTROL





FREE YOUR HANDS TAP YOUR FEET

Kitchens are hands-on places, where multi-tasking is a must. Why not make life easier for yourself with a GROHE foot-activated faucet? We've developed an innovative solution that lets you control the flow of water without using your hands, making your kitchen more hygienic, convenient and instinctive to use. GROHE Foot Control faucets turn the flow of water On and Off with just a tap of your foot on the base unit. Leave your hands free and keep your faucet sparkling clean. Change the way you control your kitchen with just a single tap.



Ideal for busy kitchens where there's always something going on, GROHE Foot Control is hygienic and convenient, and comes without any compromise on style. With GROHE's innovative Foot Control technology you can spend less time cleaning and more time cooking, baking, kneading, finger-painting...living.

GROHE FOOT CONTROL

For kitchens where time is of the essence and convenience is a must, why not go hands-free? GROHE's new Foot Control faucets can be turned On and Off with a gentle tap of your foot on the base unit, leaving your hands free and your faucet spotless at all times. Two of our most popular faucets now come with this innovative Foot Control technology, or you can retro-fit the feature to any GROHE pull-out/pull-down kitchen faucet. To say goodbye to germs, mess and hassle, simply tap your feet!





GROHE FOOT CONTROL PRODUCT FEATURES



GROHE StarLight®
Radiant long-life shine resistant
to soil and tarnishing.



GROHE SilkMove®
Activate / Deactivate the faucet
using the mechanical lever.





Comfort Height

Height of the spout allows easy filling of large pots.



Pull-Out Dual Spray

Pull-out dual spray increases operating radius of the faucet and offers easy switching between regular water flow and the spray.



Foot Control

Allows to just touch the bottom side of the cabinet with a gentle tap of your foot to turn the faucet On and Off Preset to desired temperature with the new mixing valve.

Simple activation/deactivation of the water flow with your foot or with the mechanical lever.

GROHE K7[®] FOOT CONTROL


Unlock the professional potential of your kitchen with the K7[®] Foot Control faucet. Enjoy the high-performance of the K7[®]'s professional spray feature and extractable hose combined with the convenience of Foot Control technology. The faucet's crisp architectural styling makes it a design feature in itself, but the exceptional pro-level features mean its more than a match for any task. For busy kitchens where efficiency is a must the K7[®] Foot Control faucet puts you in total control – and leaves your hands free for other tasks.





31 314 000 / 31 314 DC0

K7® Medium Foot Control
with professional spray

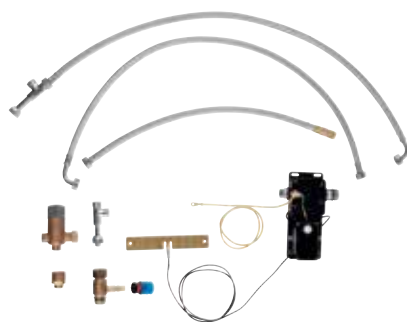

30 310 000

Retro-Fit™ set
to upgrade any GROHE pull-out/pull-down
kitchen faucet with Foot Control technology



40 535 000 / 40 535 DC0

Cosmopolitan soap dispenser
for liquid soaps
15 oz. capacity

Colour options:

● 000 | StarLight® Chrome | ● DC0 | SuperSteel



GROHE
SilkMove®



GROHE
StarLight®



Foot
Control



Professional
Spray



Speed
Clean



Comfort
Height



Forward
Rotating Lever




GROHE LADYLUX³ CAFÉ FOOT CONTROL

Introduce elegant, functional and ergonomic design to your kitchen while enjoying the effortless functionality of hands-free operation with GROHE's Ladylux³ Café Foot Control faucet. The sleek lines with a wide swivel spout remain the same while the GROHE Foot Control lets you keep your hands free and your faucet germ-free. With a pull-out dual spray feature and the dazzling, durable GROHE StarLight[®] finish, the Ladylux³ Café Foot Control is the perfect choice for a fuss-free kitchen design.



● ●
30 313 000 / 30 313 DC0
Electronic Sink Mixer
with pull-down dual spray

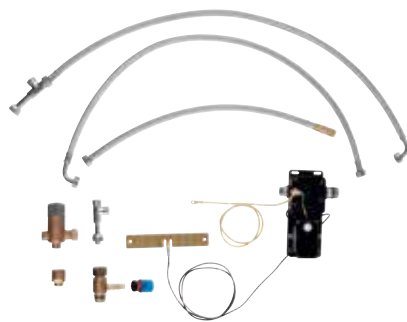

● ●
30 310 000
Retro-Fit™ set
to upgrade any GROHE pull-out/pull-down



● ●
40 535 000 / 40 535 DC0
Cosmopolitan soap dispenser
for liquid soaps
15 oz. capacity

Colour options:

● 000 | StarLight[®] Chrome | ● DC0 | SuperSteel



GROHE
SilkMove[®]



GROHE
StarLight[®]



Foot
Control



Pull-Out
Dual Spray



Speed
Clean



Comfort
Height



Forward
Rotating Lever





GROHE FOOT CONTROL INSTALLATION

The Installation of the Foot Control faucets is surprisingly easy. Just follow the main installation steps below and your faucet will be ready to use in no time. To see the complete installation, scan the QR code on the right-hand side to watch the installation video online.



To watch the full installation video on YouTube scan the QR code with your smartphone or tablet.



1. Pass the three flexible hoses through the base plates and the o-ring, hold it in place under the mixer. Then guide the hoses and mixer through the tap-hole. Assemble the mixer under the sink with the fixing set.



2. Attach the flexible hoses (warm & cold) to both t-connections and connect the mixing valve with the t-connector on the cold water angle valve via the single flexible hose.

*For foot control operation of the above shown Essence faucet, install with the GROHE Retro-Fit™ Foot Control set.



3. Secure the controller and the solenoid valve housing to the kitchen cabinet (max. distance to mixer of 300mm/11.8 in.) and connect it with mixing valve. Insert the battery into the solenoid valve.



4. Fix the yellow balancing cable under the sink using the supplied tape. Fix the Foot Control sensor plate on the plinth panel or on the bottom side of the cabinet and attach the sensor cable to the Foot Control sensor plate.



5. Pre-set the desired temperature for the Foot Control function at the mixing valve. Test and enjoy the Foot Control Technology!

GROHE EASYTOUCH-FAQs

How can I regulate the temperature and the water flow?

The faucet can be operated as a regular kitchen faucet, where the temperature and the water flow can be adjusted with the mechanical lever function.

What temperature and water flow intensity can I expect with the EasyTouch function?

EasyTouch allows cold & warm water to be activated, and the flow intensity is pre-set. Use the mixing valve to adjust to your desired water temperature.

Does the water flow automatically start, when touching the faucet, e.g. to swivel?

No, the EasyTouch technology automatically detects whether you are touching the faucet in order to start the water flow or whether you are holding the spout for less than 5 seconds to swivel it into place.

How do I clean the faucet?

Simply touch the faucet for longer than 5 seconds. The cleaning mode will be activated automatically for 2 minutes.

What happens if I do not stop the water flow with the EasyTouch function?

No worries! For safety reasons the water flow will stop automatically after 60 sec.

Is the EasyTouch technology battery- or power pack operated?

The EasyTouch faucets are battery-operated.

How long does the battery last?

This depends on how often you use the EasyTouch function. The battery is very durable and has a lifetime of 2-4 years.

How can I tell when the battery needs replacement?

When the battery is completely empty, the EasyTouch function will no longer work. Approximately 1 month before, the water flow will pulsate 3 times, when activating the EasyTouch function, to indicate that the battery is depleting.

Can I still use the faucet if the battery is completely empty?

Of course. By using the mechanical lever function.

Does the faucet also work under extreme climatic conditions?

Certainly. Even at temperatures of up to 104 degrees Fahrenheit, with air humidity of up to 80%, the EasyTouch faucets remain perfectly functional.

GROHE

FOOT CONTROL -FAQs

How can I regulate the temperature and the water flow?

The faucet can be operated as a regular kitchen faucet, where the temperature and water flow can be adjusted with the mechanical lever function.

What temperature and water flow intensity can I expect with the Foot Control function?

Foot Control allows cold & warm water to be activated, and the flow intensity is pre-set. Adjust to your desired temperature with the mixing valve – Change it anytime, when needed.

Where do I need to position the Foot Control sensor to ensure a perfect activation?

To ensure a perfect activation, the Foot Control sensor can be positioned below the cabinet, behind the plinth panel (max. thickness of 25mm/0.98 in.) or anywhere on the kitchen unit within reach of max. 1,10m/43.3 in.

How do I activate the Foot Control sensor?

The water flow starts and stops by holding your foot near to the Foot Control sensor.

What happens if I do not stop the water flow with the Foot Control sensor?

No worries! For safety reasons the water flow will stop automatically after 60 sec.

How do I clean the faucet?

The faucet can be cleaned like any regular kitchen faucet since the Foot Control technology will not be affected by cleaning.

Is the Foot Control technology battery- or power pack operated?

The Foot Control technology is battery-operated.

How long does the battery last?

This depends on how often you use the Foot Control function. The battery is very durable and has a lifetime of 2-4 years.

How can I tell when the battery needs replacement?

When the battery is completely empty, the Foot Control function will no longer work. Approximately one month before, the water flow will pulsate three times, when activating the Foot Control function, to indicate that the battery is depleting.

Can I still use the faucet if the battery is completely empty?

Of course. By using the mechanical lever function.

Can I install the technology to my current GROHE kitchen faucet?

Yes, with the GROHE Foot Control Retro-Fit™ set every GROHE faucet with a pull-out/pull-down spray can be upgraded to the Foot Control technology.

Does the faucet also work under extreme climatic conditions?

Certainly. Even at temperatures of up to 104 degrees Fahrenheit, with air humidity of up to 80%, the Foot Control faucet remain perfectly functional.

GROHE KITCHEN

Pure Freude
an Wasser

GROHE

NEW

FREE
YOUR HANDS
TAP
YOUR FEET

GROHE
FOOT CONTROL

GROHE | MASTERS OF TECHNOLOGY

FOR FURTHER INFORMATION PLEASE VISIT OUR WEBSITE WWW.GROHE.COM/US
GROHE America, Inc. | 160 Fifth Ave, New York, NY 10010 | ©05/2016 - Copyright by GROHE

PART OF LIXIL